

FCC Information

FCC Information

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

In accordance with FCC requirements, changes or modifications not expressly approved by Thomson Inc. could void the user's authority to operate this product.

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation.

This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications.

However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Also, the Federal Communications Commission has prepared a helpful booklet, "How To Identify and Resolve Radio TV Interference Problems." This booklet is available from the U.S. Government Printing Office, Washington, DC 20402. Please specify stock number 004-000-00345-4 when ordering copies.

This Class B digital apparatus complies with Canadian ICES-003.
Cet appareil numérique de la classe B est conforme à la norme du NMB-003 du Canada.

FCC Information

FCC Information

In the event that service should be required, you may need both the model number. In the space below, record the date and place of purchase.

Date of Purchase: _____
Place of Purchase: _____

Service Information

This product should be serviced only by those specially trained in appropriate servicing techniques. For instructions on how to obtain service, refer to the warranty included in this Guide.

Ecology

Help protect the environment - we recommend that you dispose of used batteries by putting them into specially designed receptacles.

Maintenance

Clean the unit with a soft cloth, or a damp leather chamois. Never use solvents.

FCC Information

Precautions for Batteries

- If you do not use the unit for more than one month, be sure to remove the batteries to avoid leakage.
- When installing batteries, be sure that the polarities are correct. Reversing polarity may cause personal injury and damage to the batteries.
- Never mix new batteries with old ones. Do not mix battery types.
- Discard leaking batteries immediately. Leaking batteries can cause skin burns or other personal injury.
- Do not dispose of in fire.
- Do not charge batteries which are not intended to be recharged.

Power Supply


- (battery power) 2 x "AAA"

ESD Remark:

In case of malfunction due to electrostatic discharge just reset the product (disconnect and reconnect of the power source may be required) to resume normal operation.



User manual
Guide de l'utilisateur

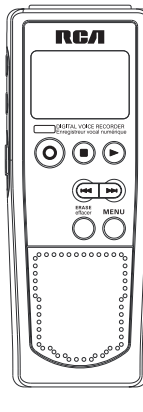

Comercializadora Thomson de México, S.A. de C.V.
Avario Oregon No. 151, Piso 13
Col. Roma, Delegación Cuauhtémoc
C.P. 06700, México, D.F.
Teléfono: 52-55-11-020360
RFC: CTM-980723-K55


Thomson Inc.
P.O. Box 1976, Indianapolis, IN 46206-1976
©2007 Thomson Inc.
Trademark(s) ® Registered
Marat(s) ® Registered
Marque(s) ® Déposé(s)
www.rcaaudiovideo.com
Printed in China/Impreso en China

5642961C (EN/F)


RP5032
RP5036

It is important to read this instruction book prior to using your new product for the first time.
Il est important de lire ce manuel d'instructions avant d'utiliser votre nouveau produit pour la première fois.


General Controls

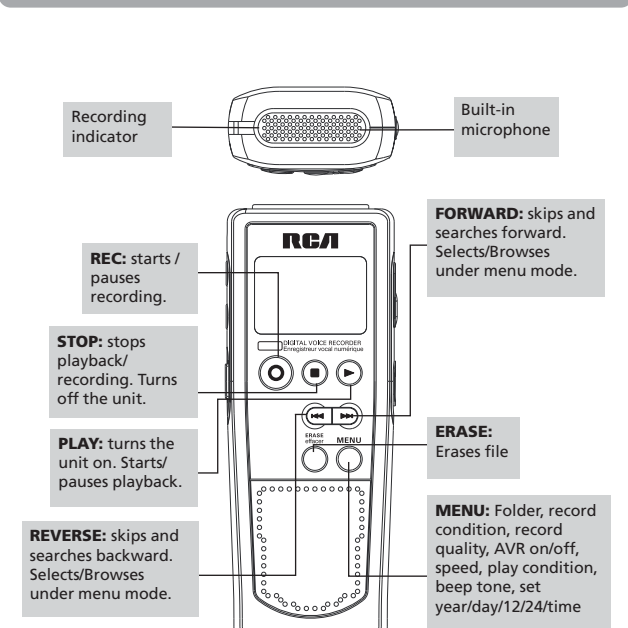

General Controls

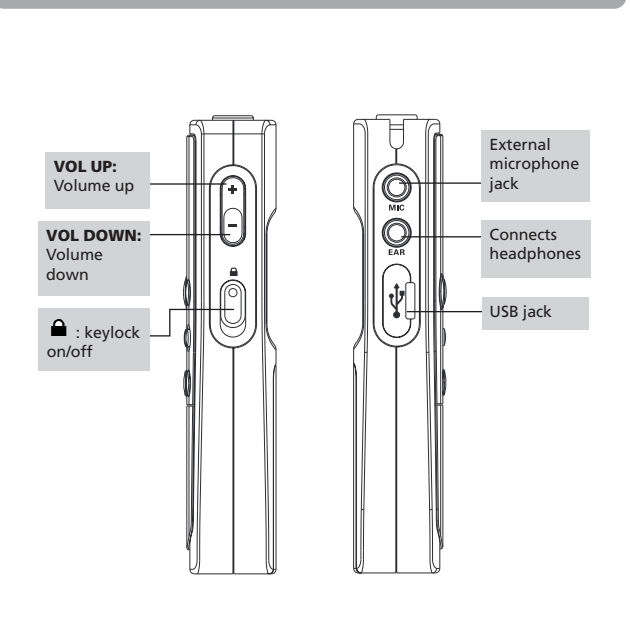

The Display

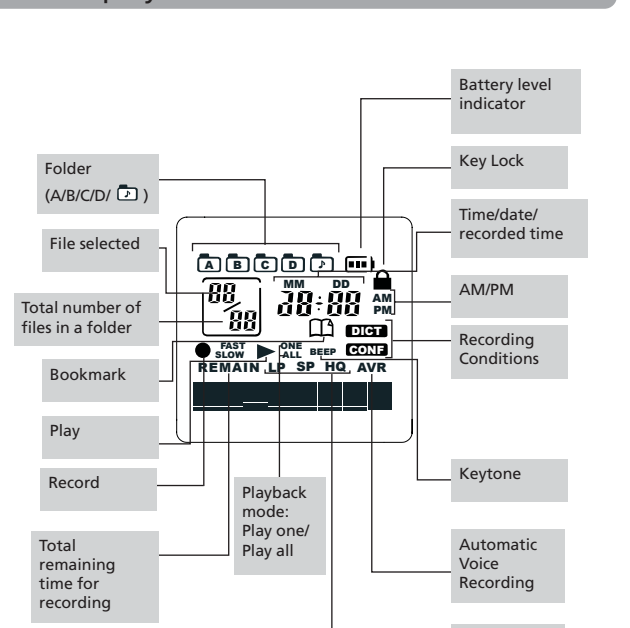

Display Messages

ALL
APPEND
CUT-E
CUT-S
DELETE
FULL
MM/DD
12 HOUR
24 HOUR
TIME
INSERT
INTRO
OFF
ON
SEN MID
TONE
NO TONE
VOL 15
YEAR
LOCKED
FORMAT
SPEED
WAIT...
001%
PAUSE

Select all (Introductory Playback & Erasing All Files)
Append (Adding Appendix)
Cut End (Cutting End)
Cut Start (Cutting)
Delete (Erasing Selected File)
Memory full
Month / day entry mode.
12 hour time display mode.
24 hour time display mode.
Time entry mode
Insertion (Inserting New Segments)
Introduction (Introductory Playback)
Off (Automatic Voice Recording)
On (Automatic Voice Recording)
Sensitivity Level (AVR)
Beeping sound on (Setting Beep Sound)
No beeping sound (Setting Beep Sound)
Volume (Setting Volume)
Year (Setting Year)
Key locked
Format the memory
Speed of playback
Unit is busy
Formatting is in process
Playback paused

Before You Begin

Unpacking Your Player

You should have the following for RP5032:

- one voice recorder
- two AAA batteries
- one USB cable
- one user manual

You should have the following for RP5036:

- one voice recorder
- two AAA batteries
- one USB cable
- one clip-on microphone
- one carrying bag
- one user manual

Power supply

This unit can be operated by 2 "AAA" batteries.

Installing Batteries (Included)

1. Slide the battery compartment door to the bottom and lift up the door to open.
2. Insert two "AAA" batteries (included) with polarities matching indicators.
3. Replace the battery compartment door.

Refer to the battery level indicator on the upper right corner of the display for battery level status. Replace with new batteries when the indicator is empty.

Auto power shut down

The unit will automatically turn off if left idle for 3 minutes.

Using earphones and external microphone

- When earphones are connected, sound output from speaker will be muted.
- When external microphone is connected, no recording can be made from built-in microphone.

Starting up the unit

Press and hold **PLAY** to turn on the unit.

Shutting down the unit

While unit is in stop mode, press **STOP** to turn off the unit.

Key lock

This feature avoids accidental key activation during recording or playback.

1. Slide the **LOCK** button upward, and the lock button is active. "LOCKED" will flash on the display whenever you press on any button.

Before You Begin

Tone

You can activate this feature so that the beep sound can be heard whenever you press on a button except during playback and recording.

1. Press **MENU** button repeatedly until TONE shows on display.

Setting the Time

Year/Date/12/24/Time Setting

With this function, you can always read on the display the recording date and time of your recorded messages. Follow the steps below for time setting.

You can still use this unit for normal recording without setting the time. However, no correct recording date and time can be referred for your recorded messages.

1. Turn on the unit.
2. Press **MENU** repeatedly to enter Time setting mode.
3. When "YEAR" is displayed, the digits of the year flashes (default is 2006). Press **REVERSE** or **FORWARD** to increase/decrease the number, press **MENU** to confirm.
4. Once the date is entered, you can choose between 12/24 hour clock display by pressing **REVERSE** or **FORWARD**, then press **MENU** to confirm.
5. Once the month is entered, the digits in the day will flash. Press **REVERSE** or **FORWARD** to increase/decrease the number, press **MENU** to confirm.
6. Once the date is entered, you can choose between 12/24 hour clock display by pressing **REVERSE** or **FORWARD**, then press **MENU** to confirm.
7. Once the time format is entered, the digits in the hour will flash (default setting is 12).

Setting the Time

(12 hour mode) & 0 (24 hour mode). Press **REVERSE** or **FORWARD** to increase/decrease the number, press **MENU** to confirm.

8. Once the hour field is entered, the digits in the minute field will flash.

Tip: Press **STOP** to exit to Menu mode.

Basic Operation

Select folder

You can select a specific folder (A, B, C, D or **ALL**) for browsing. Default is folder A.

1. Press **MENU** in stop mode.
2. Folder A, B, C, D or **ALL** icon will flash on display.
3. Press **REVERSE** or **FORWARD** to select a folder.
4. Press **STOP** to exit the Menu and enter the stop mode in the desired folder.

Select file

You can select a specific file for playback.

1. Select the folder you need. (See "Select folder" for more detail.)
2. Press **REVERSE** or **FORWARD** to select the file you want. If the file you want is in the current folder, you can press **REVERSE** or **FORWARD** to select it directly in stop and play mode.

Normal Playback

1. In stop mode, select a folder (A, B, C, D or **ALL**).
2. Select file by pressing **REVERSE** or **FORWARD**.
3. Press **PLAY** to start playback.
4. Press **PLAY** to pause playback, press again to resume.
5. You can press **VOL UP** (▲) or **VOL DOWN** (▼) to adjust listening volume.
6. Press and hold **REVERSE** or **FORWARD** to do a quick search within a file.
7. Press **REVERSE** or **FORWARD** once to skip one file forward or backward.
8. Press **STOP** to stop playback.

Basic Operation

Note:

- You can record up to 99 files in one folder, not exceeding 356 files in total. When the maximum limit is reached, "FULL" will show on the display.
- You can find the files transferred from the computer in the **ALL** folder. See "Connecting to the Computer" for details of file transfer.
- "ALL" is displayed if you are at the first file and press **REVERSE** or last file and press **FORWARD** to confirm deleting. (or press **PLAY** during recording.)

Deleting a bookmark

1. Select folder (A, B, C or D).
2. Select file.
3. Press **ERASE** once and **DELETE** will flash on the screen.
4. Press and hold **PLAY** for 3 seconds to confirm deleting. (or press **STOP** to cancel erasing bookmark)

Skipping to a bookmark

You can skip to a bookmark anytime during playback.

1. During playback, press **REC** once to set a bookmark, the bookmark icon **BM** flashes on the display.
2. You can create multiple bookmarks until the memory is full.

Note:

- When the memory is full, "FULL" will show on the display.
- If the file have multiple bookmarks, steps 1-4 will delete ALL bookmarks.
- If there are bookmarks in a file, pressing **FORWARD** will go through the bookmarks (if available).
- If there are bookmarks in a file, pressing **BACKWARD** will go back to the previous file.

Recording Mode

Setting Recording Mode

You can select between two recording modes - manual recording and AVR (automatic voice recording).

1. **Manual Recording**
1. In **STOP** mode, select folder (A, B, C or D). See "Select folder" for more detail.
2. Press **RECORD** to start recording.
3. To pause recording, you can press **RECORD** once, press again to resume recording, press **STOP**.
4. To stop recording, press **STOP**.

Tip: To view the remaining time and other recording information, you may press **PLAY** during recording.

1. **AVR (Automatic Voice Recording)**
- This feature allows the unit to sense sound and to record only when you are speaking into the microphone. When diction stops for about 3 seconds, recording will automatically stop again automatically when you resume diction.
1. In stop mode, press **MENU** four times. (See "Select folder" for more detail.)

Tip: The first syllable or two may be lost when you start recording because this "sound" is used to turn on the AVR feature. It is a good practice to make some "sounds" or say a short word to activate the AVR before you begin actual diction.

Recording Quality / Condition

Setting Recording Quality

You can select between three recording qualities. Default is **HQ**.

Definition

- **SP** (Standard Play) - Model RP5032 allows about 17.2 hours recording while model RP5036 allows about 35.5 hours recording.
- **LP** (Long Play) - Model RP5032 allows about 35 hours recording while model RP5036 allows about 71.5 hours recording.
- **HQ** (High Quality) - Model RP5032 allows about 8.5 hours recording while model RP5036 allows 17.5 hours recording.

Tip: For conferences, to obtain optimum recording quality, place the recorder with the microphone freely exposed to the sound source as close as convenient. A built-in automatic recording level control will set the optimum record level during manual recording. Avoid recording near unwanted noise sources, such as air conditioners or fans.

Setting Recording Condition

You can select between two recording conditions. Default is **DICT**.

1. While in stop mode, press **MENU** button until SPLPHQ flashes on the display.
2. Toggle between **SP**, **HQ**, and **LP** by pressing **REVERSE** or **FORWARD**.
3. Confirm selection by pressing **MENU** or **STOP** button.

Other Functions

IntroScan

This feature allows playback of the beginning 3 seconds of each file in a folder.

1. Select folder (A, B, C, D or **ALL**) and file.
2. Press **REVERSE** or **FORWARD** until ALL shows on display.
3. Press **PLAY** to start introductory playback, **INTRO** shows on display.
4. Press **PLAY** to start playing desired file.
5. Press **STOP** to exit Intro Scan sooner.

Play one / play all

You can choose to play a specific file or all files in a folder.

1. In stop mode, press **MENU** button repeatedly until **ONE** appears on display.
2. Press **REVERSE** or **FORWARD** to toggle between ONE and ALL.

Erasing selected file

You can delete a file by the following steps:

1. Select folder (A, B, C, D or **ALL**).
2. Select file.
3. Press **ERASE** once and **DELETE** will flash on the screen.
4. Press and hold **ERASE** for 3 seconds to confirm deleting. (or press **STOP** to cancel erasing file)

Erasing all files in a folder

You can delete all files in a specific folder by the following steps:

1. Turn on the unit.
2. Select a folder (A, B, C, D or **ALL**).
3. In stop mode, press **FORWARD** continuously until "ALL" appears on the display.
4. Press **ERASE** and "DELETE" will flash on the display.
5. Press and hold **ERASE** for about 3 seconds, all files in the selected folder will be erased completely (or press **STOP** to cancel erasing all files).

Tip: File numbers that come after erased file will move down one number automatically.

Erasing File / Folder

CAUTION

The edit function does not operate when battery power is too low or the introduction Mode is in use.

Speed

You can adjust the playback speed.

1. Select folder.
2. Select file for adjusting playback speed.
3. Press **PLAY** to start playback.
4. During playback, press **MENU** once, "SPEED" will appear on the display.
5. Press **REVERSE** or **FORWARD** to toggle between FAST and SLOW.
6. Press **PLAY** to confirm and exit.

Append

You can add an appendix (e.g. reminder, supplementary information) to the end of the file.

1. Select folder.
2. Select file for adding an appendix.
3. Press **PLAY** to start playback.
4. During playback, press **MENU** until "APPEND" flashing on the display.
5. Press **RECORD** within 3 seconds to start recording appendix.
6. Press **STOP** to stop recording.

Cut

You can erase unwanted parts from your recording.

1. Select folder.
2. Select file.
3. Start playback of the file with the unwanted part.
4. Press **ERASE** to mark the start of the unwanted part, "CUT-S" flashes on the display.
5. Press **ERASE** to mark the end of the unwanted part, "CUT-E" flashes on the display.

Advanced Operation

Insert

You can insert new segments into a file without erasing previously recorded content.

1. Select folder.
2. Select file for inserting new segment.
3. Start playback.
4. Press **MENU** twice to start recording new segment, "INSERT" will flash on the display. Press **RECORD** within three seconds.
5. Press **STOP** to stop recording.
6. "WAIT" will show on the display.
7. After the memory rearrangement is completed, the unit will go to STOP mode.

Unit doesn't turn on

- Check that batteries are properly inserted and not exhausted.
- Make sure battery compartment door is properly closed.
- Make sure LOCK function is not activated.

Display keeps flashing when unit is off

- You may not have set the Time. Refer to section on Time Setting.

Cannot record

- Make sure LOCK function is not activated.
- Make sure memory is not full.
- You have recorded 99 files in one folder. Try recording in a new folder.

Cannot stop recording date and time during playback

- You may have not set the date and time before recording. Refer to section "Time Setting".

No sound from speaker during playback

- Make sure volume is not set to 0.
- Headphones should not be connected.

Cannot keep the saved setting

- If the batteries are removed, saved settings may be removed.

Advanced Operation

Format (Caution! All data inside the memory will be erased)

You can format the internal memory when needed. (e.g. compatibility problem, etc.)

The procedures are as follows:

1. Turn on the unit.
2. Press **ERASE**, "DELETE" will flash on the display.
3. Press and hold **REC** for 3 seconds, "FORMAT" will flash on the display.

Tip: Cutting, inserting new segments and adding appendix will only update the recorded time length, without changing recording time and date.

Advanced Operation

Limitation of Warranty

The WARRANTY STATED ABOVE IS THE ONLY WARRANTY APPLICABLE TO THIS PRODUCT. ALL OTHER WARRANTIES, EXPRESS OR IMPLIED (INCLUDING ALL IMPLIED WARRANTIES OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE) ARE HEREBY DISCLAIMED. NO VERBAL OR WRITTEN INFORMATION GIVEN BY THOMSON INC., ITS AGENTS OR EMPLOYEES SHALL CREATE A WARRANTY OR IN ANY WAY INCREASE THE SCOPE OF THIS WARRANTY.

REPAIR OR REPLACEMENT AS PROVIDED UNDER THIS WARRANTY IS THE EXCLUSIVE REMEDY OF THE CONSUMER. THOMSON INC. SHALL NOT BE LIABLE FOR INCIDENTAL OR CONSEQUENTIAL DAMAGES RESULTING FROM THE USE OF THIS PRODUCT OR ARISING OUT OF ANY BREACH OF ANY EXPRESS OR IMPLIED WARRANTY ON THIS PRODUCT. THIS DISCLAIMER OF WARRANTIES AND LIMITED WARRANTY ARE GOVERNED BY THE LAWS OF THE STATE OF INDIANA. EXCEPT TO THE EXTENT PROHIBITED BY APPLICABLE LAW, ANY IMPLIED WARRANTY OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE ON THIS PRODUCT IS LIMITED TO THE APPLICABLE WARRANTY PERIOD SET FORTH ABOVE.

How state law relates to this warranty:

- Some states do not allow the exclusion nor limitation of incidental or consequential damages, or limitations on how long an implied warranty lasts, so the above limitations or exclusions may not apply to you.
- This warranty gives you specific legal rights, and you also may have other rights that vary from state to state.

If you purchased your product outside the USA:

This warranty does not apply. Contact your dealer for warranty information.

Connecting to the Computer

Install the USB Driver (Windows 98SE Only)

For Windows 98SE system, you need to install a USB driver before your computer can recognize your player.

1. Go to the following link: <http://www.rcaaudiovideo.com/en-US/DownloadSelection.html> and select your product category by clicking "Digital Voice Recorder" from the drop down menu.
2. Select your model number RP5032 or RP5036 from the drop down menu by clicking on it.
3. Click "Go" to load the download page and download the driver for your model.
4. Open the downloaded file and follow the on-screen instruction.
5. After installation is completed, reboot your computer.

Plugged into the computer

You can transfer files with your computer via USB connection.

1. Use the USB cable supplied to connect the unit to the computer.
2. "PC-LINK" will show on the display.
3. The unit will appear as a removable drive in your computer.

Tip:

- Data transfer is possible even if two batteries are installed in the unit.
- On some operating system, a message warning about "Removing a USB device without stopping it..." might appear, you can press OK to safely ignore it.

Disconnecting from the computer

Unplug the USB cable after you have copied files to or from the unit.

Connecting to the Computer

Using your unit as a file storage device

The unit can function as a detachable data storage. You can take along your favorite images and documents wherever you go. Simple cut-and-paste or drag-and-drop files to or from it via USB connection, the unit will appear as a removable disk in Windows Explorer.

Transfer Files via Windows Explorer (Drag and Drop)

Your player is associated with a drive letter. From Windows Explorer, highlight all the mp3 files/folders you want to transfer to your Player and drag them to the folder named "MUSIC" in the drive. Your mp3 files can be found in this folder in the Player once it is disconnected from the computer.

No sound from speaker during playback

- Make sure volume is not set to 0.
- Headphones should not be connected.

Troubleshooting Tips

Unit doesn't turn on

- Check that batteries are properly inserted and not exhausted.
- Make sure battery compartment door is properly closed.
- Make sure LOCK function is not activated.

Cannot activate the unit after pressing on keys

- There may be software problems. Remove the batteries to reset the unit.

Recordable time becomes shorter

- You may have set the recording quality to "High Quality", refer to section "Setting Recording Quality".

Cannot perform playback

- Make sure you have selected folder with recorded messages.
- Make sure LOCK function is not activated.

Cannot erase recorded file(s)

- Make sure you follow each step under section "Erasing Selected File" carefully.

Cannot stop recording when AVR ON

- If the HIGH AVR sensitivity is selected, recording may not be stop in noisy environment.

Cannot keep the saved setting

- If the batteries are removed, saved settings may be removed.

U.S. Limited Warranty

What your warranty covers:

- Defects in materials or workmanship.

For how long after your purchase:

- One year from date of purchase.

The warranty period for rental units will begin with the first rental or 45 days from date of shipment to the rental firm, whichever comes first.

What we will do:

- Provide you with a new, or at our option, a refurbished unit. The exchange unit is under warranty for the remainder of the original product's warranty period.
- Proof of purchase in the form of a bill of sale or receipted invoice which is evidence that the product is within the warranty period must be presented to obtain warranty service. For rental firms, proof of first rental is also required.

How to make a warranty claim:

- Properly pack your unit. Include any cables, etc., which were originally provided with the product. We recommend using the original carton and packing materials.
- Include evidence of purchase date such as the bill of sale. Also print your name and address and a description of the defect. Send via standard UPS or its equivalent to:

Thomson Inc.
Product Exchange Center
11721 B Alameda Avenue
Socorro, Texas 79097

- Insure your shipment for loss or damage. Thomson accepts no liability in case of damage or loss en route to Thomson.
- Pay any charges billed to you by the Exchange Center for service not covered by the warranty.
- A new or refurbished unit will be shipped to you freight prepaid.

U.S. Limited Warranty

What your warranty does not cover:

- Customer instruction. (Your Owner's Manual provides information regarding operating instructions and user controls. For additional information, ask your dealer.)
- Installation and set-up service adjustments.
- Batteries.
- Damage from misuse or neglect.
- Products which have been modified or incorporated into other products.
- Products purchased or serviced outside the USA.
- Acts of nature, such as but not limited to lightning damage.

Limitation of Warranty:

THE WARRANTY STATED ABOVE IS THE ONLY WARRANTY APPLICABLE TO THIS PRODUCT. ALL OTHER WARRANTIES, EXPRESS OR IMPLIED (INCLUDING ALL IMPLIED WARRANTIES OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE) ARE HEREBY DISCLAIMED. NO VERBAL OR WRITTEN INFORMATION GIVEN BY THOMSON INC., ITS AGENTS OR EMPLOYEES SHALL CREATE A WARRANTY OR IN ANY WAY INCREASE THE SCOPE OF THIS WARRANTY.

REPAIR OR REPLACEMENT AS PROVIDED UNDER THIS WARRANTY IS THE EXCLUSIVE REMEDY OF THE CONSUMER. THOMSON INC. SHALL NOT BE LIABLE FOR INCIDENTAL OR CONSEQUENTIAL DAMAGES RESULTING FROM THE USE OF THIS PRODUCT OR ARISING OUT OF ANY BREACH OF ANY EXPRESS OR IMPLIED WARRANTY ON THIS PRODUCT. THIS DISCLAIMER OF WARRANTIES AND LIMITED WARRANTY ARE GOVERNED BY THE LAWS OF THE STATE OF INDIANA. EXCEPT TO THE EXTENT PROHIBITED BY APPLICABLE LAW, ANY IMPLIED WARRANTY OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE ON THIS PRODUCT IS LIMITED TO THE APPLICABLE WARRANTY PERIOD SET FORTH ABOVE.

How state law relates to this warranty:

- Some states do not allow the exclusion nor limitation of incidental or consequential damages, or limitations on how long an implied warranty lasts, so the above limitations or exclusions may not apply to you.
- This warranty gives you specific legal rights, and you also may have other rights that vary from state to state.

If you purchased your product outside the USA:

This warranty does not apply. Contact your dealer for warranty information.

Canadian limited warranty

Thomson multimedia Ltd. warrants to the purchaser or gift recipient that if any manufacturing defect becomes apparent in this product within 1 year from the original date of purchase, it will be replaced free of charge, including return transportation.

This warranty does not include damage to the product resulting from accidents, misuse or leaking batteries.

Should your product not perform properly during the warranty period, either:

1. Return it to the selling dealer with proof of purchase for replacement.
2. Remove the batteries (where applicable), and pack product complete with accessories in the original carton (or equivalent). Mail prepaid (with proof of purchase) and insured to:

Thomson multimedia Ltd.
6200 Edwards Blvd.
Mississauga, Ontario L5T 2V7
Canada

The provisions of this written warranty are in addition to and not a modification of or subtraction from the statutory warranties and other rights and remedies contained in any applicable legislation, and to the extent that any such provisions purport to disclaim, exclude or limit any such statutory warranties and other rights and remedies, such provisions shall be deemed to be amended to the extent necessary to comply therewith.

If you are unable to find a qualified servicer for out of warranty service, you may write to:

Thomson Inc.
P.O. Box 0944
Indianapolis, Indiana, U.S.A., 46206-0944

Attach your sales receipt to this booklet for future reference. This information is required if service is needed during the warranty period.

PURCHASE DATE

NAME OF STORE

Note

Note

Note

Note

Information FCC

Information FCC

Cet appareil est conforme à l'article 15 des règlements de la FCC. Son fonctionnement est sujet aux deux conditions suivantes : (1) cet appareil ne doit pas causer d'interférence nuisible et (2) cet appareil doit accepter toute interférence reçue, y compris les interférences pouvant entraîner un fonctionnement indésirable.

Selon les exigences de la FCC, tout changement ou modification non expressément approuvés par Thomson Inc. pourrait annuler l'autorisation accordée à l'utilisateur d'utiliser cet appareil.

Cet appareil a été testé et déclaré conforme aux exigences applicables à un appareil numérique de classe B en vertu de la partie 15 des règlements de la FCC. Ces normes sont conçues pour fournir une protection raisonnable contre l'interférence nuisible dans les installations résidentielles.

Cet appareil génère, utilise et peut émettre de l'énergie sous forme de fréquence radio et, s'il n'est pas installé conformément aux instructions, peut causer de l'interférence nuisible aux communications radio. Cependant, il n'est pas assuré que de

l'interférence ne se produira pas dans une installation en particulier. Si cet appareil produit de l'interférence nuisible à la réception de signaux radio ou de télévision, ce qui peut être identifié en allumant et en fermant cet appareil, l'utilisateur devrait essayer de corriger ce problème d'interférence par une ou plusieurs de ces mesures :

- réorienter ou déplacer de l'antenne de réception.
- augmenter la distance entre cet appareil et le récepteur.
- brancher l'appareil dans une prise murale faisant partie d'un circuit d'alimentation électrique autre que celui du récepteur.
- consulter le revendeur ou un technicien compétent en radio-télévision pour obtenir de l'aide.

La Federal Communications Commission a édité un livret utile, « How to Identify and Resolve Radio TV Interference Problems ». Pour obtenir ce livret, communiquez avec le U.S. Government Printing Office, Washington, DC 20402. Précisez le numéro de stock 004-000-00345-4 lorsque vous commanderez des exemplaires.

This Class B digital apparatus complies with Canadian ICES-003. Cet appareil numérique de classe B est conforme à la norme NMB-0033 du Canada.

Information FCC

Pour vos dossiers

Vous aurez besoin du numéro de modèle en cas de réparation. Inscrivez ci-dessous la date d'achat et l'endroit où vous l'avez acheté : date de l'achat et l'endroit de l'achat :

Information sur le service

Ce produit doit être réparé uniquement par des personnes formées pour ce travail. Pour des instructions sur la manière d'obtenir une réparation, consultez la garantie incluse avec ce guide.

Écologie

Protégez l'environnement : disposez des piles usagées dans les contenants prévus à cet effet.

Entretien

Nettoyez l'appareil avec un chiffon doux ou avec un chiffon humide. N'utilisez jamais de solvant.

Précautions envers l'appareil

- N'utilisez pas l'appareil immédiatement après le transport d'un endroit froid à un endroit plus chaud; des problèmes de condensation pourraient surgir.
- Ne frappez pas l'appareil, particulièrement pendant un enregistrement. Les données enregistrées pourraient être altérées.
- Ne rangez pas l'appareil près du feu, dans un endroit très chaud ou au soleil.
- N'utilisez pas et ne rangez pas l'appareil dans un endroit où l'électricité statique est fréquente et où les parasites électriques sont présents (exemples : haut-parleur, télévision).
- Nettoyez l'appareil avec un chiffon doux ou avec un chiffon humide. N'utilisez jamais de solvant.
- L'appareil doit être ouvert seulement par du personnel compétent.
- N'exposez pas cet appareil à la pluie ou à l'humidité.

Information FCC

Précautions envers les piles

- Retirez les piles pour éviter une fuite si vous n'utilisez pas l'appareil pendant plus d'un mois.
- Lorsque vous installez les piles, assurez-vous de respecter les polarités. L'inversion des polarités peut causer des blessures et endommager les piles.
- Ne mélangez pas des piles neuves avec des piles vieilles.
- Jetez immédiatement les piles qui coulent. Les piles qui coulent peuvent causer des brûlures et d'autres blessures.
- Ne pas incinérer.
- Ne rechargez pas les piles qui ne sont pas conçues pour être rechargées.

Bloc d'alimentation

- Alimentation par deux piles AAA

Remarque ESD (Interférences Electrostatiques)

En cas de dysfonctionnement dû à une décharge électrostatique, veuillez simplement réinitialiser l'appareil (il sera peut-être nécessaire de débrancher, puis de rebrancher la source d'alimentation) pour revenir à un fonctionnement normal.



AVERTISSEMENT: Afin de prévenir incendie ou danger de choc électrique, n'exposez pas ce produit à la pluie ou à l'humidité.

Comercializadora Thomson de México, S.A. de C.V.

Alvaro Obregón No. 151, Piso 13.

Cd. Roma, Delegación Cuauhtémoc

C.P. 06700, México, D.F.

Teléfono: 52-55-11-020360

REC: CTM-98073-4K5


5642961C (EN/F)

Messages affichés

- ALL Sélectionne tout (lecture de l'introduction et suppression de tous les fichiers)
- APPEND Annexe (ajout d'une annexe)
- CUT-E Coupe la fin (coupure)
- CUT-S Coupe le début (coupure)
- DELETE Suppression (efface le fichier sélectionné)
- FULL Mode plein
- MM/DD Mode de saisie mois / jour
- 12 HOUR Affichage de l'horloge en mode 12 heures
- 24 HOUR Affichage de l'horloge en mode 24 heures
- TIME Mode de saisie de l'heure
- INSERT Insertion (insertion de nouveaux segments)
- INTRO Introduction (lecture de l'introduction)
- OFF Off (commande automatique par la voix)
- ON On (commande automatique par la voix)
- SEN MID Niveau de sensibilité (CAV)
- TONE Bip active (réglage du son bip)
- NO TONE Bip désactive (réglage du son bip)
- VOL 15 Volume (réglage du volume)
- YEAR Année (réglage de l'année)
- LOCKED Touches verrouillées
- FORMAT Formater la mémoire
- SPEED Vitesse de la lecture
- WAIT... L'appareil exécute une commande
- 001% Le formatage est en cours
- PAUSE La lecture est suspendue




User manual
Guide de l'utilisateur

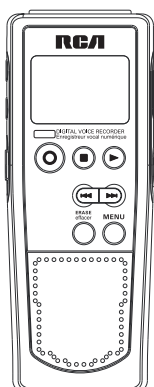

RP5032
RP5036


It is important to read this instruction book prior to using your new product for the first time. Please use recommended 36 cF manual. Instructions avant d'utiliser votre nouveau produit pour la première fois.

Contrôles généraux

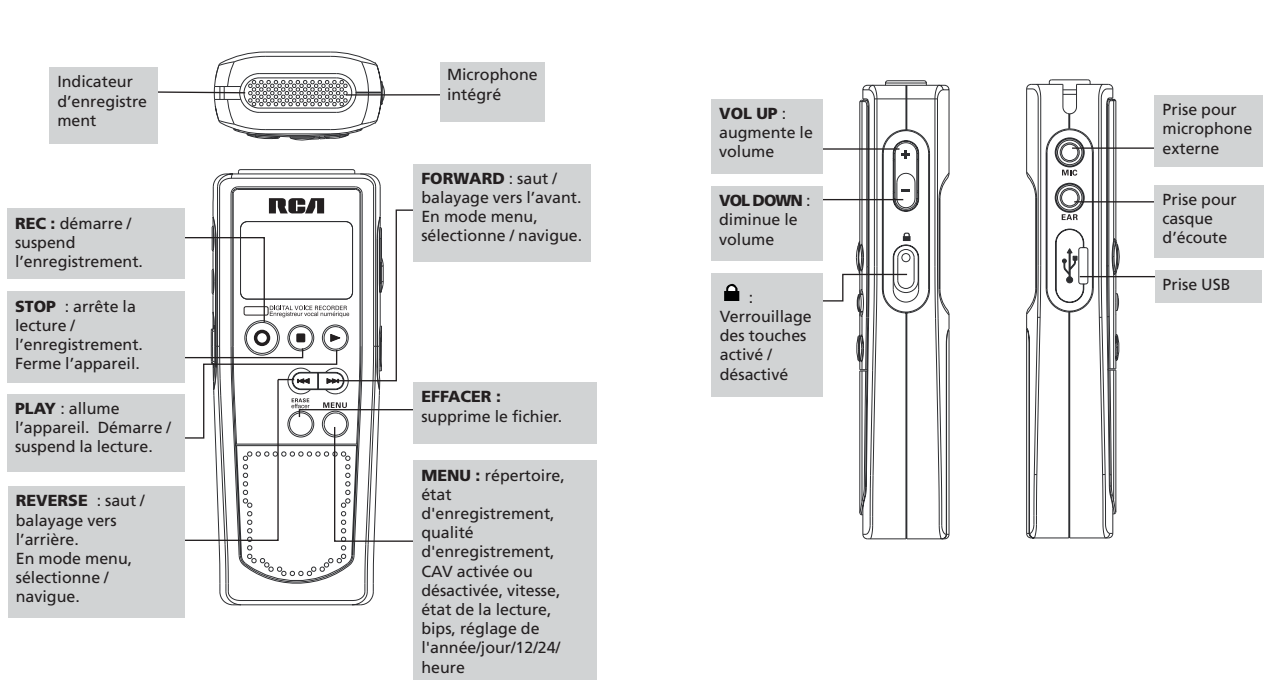

Contrôles généraux

Affichage

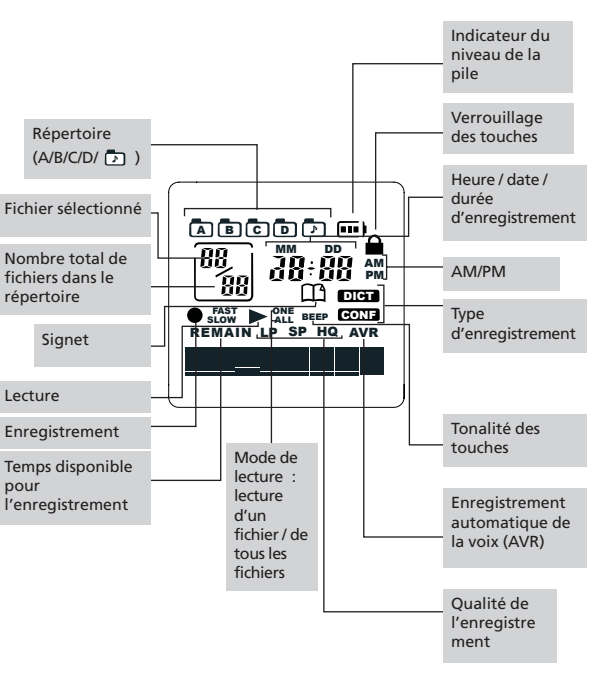

Messages affichés

- ALL Sélectionne tout (lecture de l'introduction et suppression de tous les fichiers)
- APPEND Annexe (ajout d'une annexe)
- CUT-E Coupe la fin (coupure)
- CUT-S Coupe le début (coupure)
- DELETE Suppression (efface le fichier sélectionné)
- FULL Mode plein
- MM/DD Mode de saisie mois / jour
- 12 HOUR Affichage de l'horloge en mode 12 heures
- 24 HOUR Affichage de l'horloge en mode 24 heures
- TIME Mode de saisie de l'heure
- INSERT Insertion (insertion de nouveaux segments)
- INTRO Introduction (lecture de l'introduction)
- OFF Off (commande automatique par la voix)
- ON On (commande automatique par la voix)
- SEN MID Niveau de sensibilité (CAV)
- TONE Bip active (réglage du son bip)
- NO TONE Bip désactive (réglage du son bip)
- VOL 15 Volume (réglage du volume)
- YEAR Année (réglage de l'année)
- LOCKED Touches verrouillées
- FORMAT Formater la mémoire
- SPEED Vitesse de la lecture
- WAIT... L'appareil exécute une commande
- 001% Le formatage est en cours
- PAUSE La lecture est suspendue

Avant de commencer

Déballage du lecteur

Vous devriez avoir ceci pour le modèle RP5032 :

- un magnétophone;
- deux piles AAA;
- un câble USB;
- un guide de l'utilisateur.

Installation des piles (fournies)

1. Faites glisser le couvercle du compartiment des piles, situé sous l'appareil, et soulevez le couvercle.
2. Insérez 2 piles AAA (fournies) en respectant les polarités indiquées.
3. Remplacez le couvercle du compartiment des piles. Consultez l'indicateur du niveau des piles pour connaître leur état.

Bloc d'alimentation

Cet appareil fonctionne avec deux piles AAA.

Installation des piles (fournies)

1. Faites glisser le couvercle du compartiment des piles, situé sous l'appareil, et soulevez le couvercle.
2. Insérez 2 piles AAA (fournies) en respectant les polarités indiquées.
3. Remplacez le couvercle du compartiment des piles. Consultez l'indicateur du niveau des piles pour connaître leur état.

Fermeture de l'appareil

Appuyez et gardez enfoncée la touche **PLAY** pour mettre l'appareil en marche.

Fermeture de l'appareil

L'appareil sera en mode d'attente. Remplacez par de nouvelles piles lorsque l'indicateur indique que les piles sont faibles.

Fermeture de l'appareil

L'appareil sera en mode d'attente. Remplacez par de nouvelles piles lorsque l'indicateur indique que les piles sont faibles.

Fermeture de l'appareil

L'appareil sera en mode d'attente. Remplacez par de nouvelles piles lorsque l'indicateur indique que les piles sont faibles.

Fermeture de l'appareil

L'appareil sera en mode d'attente. Remplacez par de nouvelles piles lorsque l'indicateur indique que les piles sont faibles.

Fermeture de l'appareil

L'appareil sera en mode d'attente. Remplacez par de nouvelles piles lorsque l'indicateur indique que les piles sont faibles.

Fermeture de l'appareil

L'appareil sera en mode d'attente. Remplacez par de nouvelles piles lorsque l'indicateur indique que les piles sont faibles.

Fermeture de l'appareil

L'appareil sera en mode d'attente. Remplacez par de nouvelles piles lorsque l'indicateur indique que les piles sont faibles.

Fermeture de l'appareil

L'appareil sera en mode d'attente. Remplacez par de nouvelles piles lorsque l'indicateur indique que les piles sont faibles.

Fermeture de l'appareil

L'appareil sera en mode d'attente. Remplacez par de nouvelles piles lorsque l'indicateur indique que les piles sont faibles.

Fermeture de l'appareil

L'appareil sera en mode d'attente. Remplacez par de nouvelles piles lorsque l'indicateur indique que les piles sont faibles.

Fermeture de l'appareil

L'appareil sera en mode d'attente. Remplacez par de nouvelles piles lorsque l'indicateur indique que les piles sont faibles.

Fermeture de l'appareil

L'appareil sera en mode d'attente. Remplacez par de nouvelles piles lorsque l'indicateur indique que les piles sont faibles.

Fermeture de l'appareil

L'appareil sera en mode d'attente. Remplacez par de nouvelles piles lorsque l'indicateur indique que les piles sont faibles.

Fermeture de l'appareil

L'appareil sera en mode d'attente. Remplacez par de nouvelles piles lorsque l'indicateur indique que les piles sont faibles.

Fermeture de l'appareil

L'appareil sera en mode d'attente. Remplacez par de nouvelles piles lorsque l'indicateur indique que les piles sont faibles.

Fermeture de l'appareil

L'appareil sera en mode d'attente. Remplacez par de nouvelles piles lorsque l'indicateur indique que les piles sont faibles.

Fermeture de l'appareil

L'appareil sera en mode d'attente. Remplacez par de nouvelles piles lorsque l'indicateur indique que les piles sont faibles.

Fermeture de l'appareil

L'appareil sera en mode d'attente. Remplacez par de nouvelles piles lorsque l'indicateur indique que les piles sont faibles.

Fermeture de l'appareil

L'appareil sera en mode d'attente. Remplacez par de nouvelles piles lorsque l'indicateur indique que les piles sont faibles.

Fermeture de l'appareil

L'appareil sera en mode d'attente. Remplacez par de nouvelles piles lorsque l'indicateur indique que les piles sont faibles.

Fermeture de l'appareil

L'appareil sera en mode d'attente. Remplacez par de nouvelles piles lorsque l'indicateur indique que les piles sont faibles.

Fermeture de l'appareil

L'appareil sera en mode d'attente. Remplacez par de nouvelles piles lorsque l'indicateur indique que les piles sont faibles.

Fermeture de l'appareil

L'appareil sera en mode d'attente. Remplacez par de nouvelles piles lorsque l'indicateur indique que les piles sont faibles.

Fermeture de l'appareil

L'appareil sera en mode d'attente. Remplacez par de nouvelles piles lorsque l'indicateur indique que les piles sont faibles.

Fermeture de l'appareil

L'appareil sera en mode d'attente. Remplacez par de nouvelles piles lorsque l'indicateur indique que les piles sont faibles.

Fermeture de l'appareil

L'appareil sera en mode d'attente. Remplacez par de nouvelles piles lorsque l'indicateur indique que les piles sont faibles.

Fermeture de l'appareil

L'appareil sera en mode d'attente. Remplacez par de nouvelles piles lorsque l'indicateur indique que les piles sont faibles.

Fermeture de l'appareil

L'appareil sera en mode d'attente. Remplacez par de nouvelles piles lorsque l'indicateur indique que les piles sont faibles.

Fermeture de l'appareil

L'appareil sera en mode d'attente. Remplacez par de nouvelles piles lorsque l'indicateur indique que les piles sont faibles.

Fermeture de l'appareil

L'appareil sera en mode d'attente. Remplacez par de nouvelles piles lorsque l'indicateur indique que les piles sont faibles.

Fermeture de l'appareil

L'appareil sera en mode d'attente. Remplacez par de nouvelles piles lorsque l'indicateur indique que les piles sont faibles.

Fermeture de l'appareil

L'appareil sera en mode d'attente. Remplacez par de nouvelles piles lorsque l'indicateur indique que les piles sont faibles.

Fermeture de l'appareil

L'appareil sera en mode d'attente. Remplacez par de nouvelles piles lorsque l'indicateur indique que les piles sont faibles.

Fermeture de l'appareil

L'appareil sera en mode d'attente. Remplacez par de nouvelles piles lorsque l'indicateur indique que les piles sont faibles.

Fermeture de l'appareil

L'appareil sera en mode d'attente. Remplacez par de nouvelles piles lorsque l'indicateur indique que les piles sont faibles.

Fermeture de l'appareil

L'appareil sera en mode d'attente. Remplacez par de nouvelles piles lorsque l'indicateur indique que les piles sont faibles.

Fermeture de l'appareil

L'appareil sera en mode d'attente. Remplacez par de nouvelles piles lorsque l'indicateur indique que les piles sont faibles.

Fermeture de l'appareil

L'appareil sera en mode d'attente. Remplacez par de nouvelles piles lorsque l'indicateur indique que les piles sont faibles.

Avant de commencer

1. L'icône **LOCK** (apparaît) vers le bas pour déverrouiller les touches.
2. Appuyez sur **REVERSE** ou **FORWARD** pour activer ou désactiver les bips.
3. Appuyez sur **MENU** pour confirmer la sélection.

Tonalités

Vous pouvez activer cette fonction pour entendre un bip chaque fois

Réglage de l'heure

Réglage de l'heure

Cette fonction permet d'afficher sur l'écran la date et l'heure de l'enregistrement des messages enregistrés. Suivez les étapes suivantes pour régler l'heure.

Vous pouvez enregistrer normalement sans régler l'heure. Cette fonction permet d'afficher sur l'écran la date et l'heure de l'enregistrement des messages enregistrés.

1. Démarrez l'appareil.
2. Appuyez à plusieurs reprises sur la touche **MENU** pour sélectionner

le mode de réglage de l'heure.

3. Lorsque « YEAR » est affiché, les chiffres de l'année clignotent (2006 par défaut). Appuyez sur **REVERSE** ou **FORWARD** pour augmenter ou réduire l'affichage; appuyez sur **MENU** pour confirmer.

4. Lorsque l'année aura été saisie, les chiffres du mois clignotent (1 par défaut).

5. Appuyez sur **REVERSE** ou **FORWARD** pour modifier le mois et appuyez sur **MENU** pour confirmer.

6. Lorsque l'année aura été saisie, les chiffres du jour clignotent (1 par défaut).

7. Appuyez sur **REVERSE** ou **FORWARD** pour modifier le jour et appuyez sur **MENU** pour confirmer.

8. Lorsque l'année aura été saisie, les chiffres de l'heure clignotent (12 par défaut).

9. Appuyez sur **REVERSE** ou **FORWARD** pour modifier l'heure et appuyez sur **MENU** pour confirmer.

10. Lorsque l'année aura été saisie, les chiffres de l'heure clignotent (12 par défaut).

11. Appuyez sur **REVERSE** ou **FORWARD** pour modifier l'heure et appuyez sur **MENU** pour confirmer.

12. Lorsque l'année aura été saisie, les chiffres de l'heure clignotent (12 par défaut).

13. Appuyez sur **REVERSE** ou **FORWARD** pour modifier l'heure et appuyez sur **MENU** pour confirmer.

14. Lorsque l'année aura été saisie, les chiffres de l'heure clignotent (12 par défaut).

15. Appuyez sur **REVERSE** ou **FORWARD** pour modifier l'heure et appuyez sur **MENU** pour confirmer.

16. Lorsque l'année aura été saisie, les chiffres de l'heure clignotent (12 par défaut).

17. Appuyez sur **REVERSE** ou **FORWARD** pour modifier l'heure et appuyez sur **MENU** pour confirmer.

18. Lorsque l'année aura été saisie, les chiffres de l'heure clignotent (12 par défaut).

19. Appuyez sur **REVERSE** ou **FORWARD** pour modifier l'heure et appuyez sur **MENU** pour confirmer.

20. Lorsque l'année aura été saisie, les chiffres de l'heure clignotent (12 par défaut).

21. Appuyez sur **REVERSE** ou **FORWARD** pour modifier l'heure et appuyez sur **MENU** pour confirmer.

22. Lorsque l'année aura été saisie, les chiffres de l'heure clignotent (12 par défaut).

23. Appuyez sur **REVERSE** ou **FORWARD** pour modifier l'heure et appuyez sur **MENU** pour confirmer.

24. Lorsque l'année aura été saisie, les chiffres de l'heure clignotent (12 par défaut).

25. Appuyez sur **REVERSE** ou **FORWARD** pour modifier l'heure et appuyez sur **MENU** pour confirmer.

26. Lorsque l'année aura été saisie, les chiffres de l'heure clignotent (12 par défaut).

27. Appuyez sur **REVERSE** ou **FORWARD** pour modifier l'heure et appuyez sur **MENU** pour confirmer.

28. Lorsque l'année aura été saisie, les chiffres de l'heure clignotent (12 par défaut).

29. Appuyez sur **REVERSE** ou **FORWARD** pour modifier l'heure et appuyez sur **MENU** pour confirmer.

30. Lorsque l'année aura été saisie, les chiffres de l'heure clignotent (12 par défaut).

31. Appuyez sur **REVERSE** ou **FORWARD** pour modifier l'heure et appuyez sur **MENU** pour confirmer.

32. Lorsque l'année aura été saisie, les chiffres de l'heure clignotent (12 par défaut).

33. Appuyez sur **REVERSE** ou **FORWARD** pour modifier l'heure et appuyez sur **MENU** pour confirmer.

34. Lorsque l'année aura été saisie, les chiffres de l'heure clignotent (12 par défaut).

35. Appuyez sur **REVERSE** ou **FORWARD** pour modifier l'heure et appuyez sur **MENU** pour confirmer.

36. Lorsque l'année aura été saisie, les chiffres de l'heure clignotent (12 par défaut).

37. Appuyez sur **REVERSE** ou **FORWARD** pour modifier l'heure et appuyez sur **MENU** pour confirmer.

38. Lorsque l'année aura été saisie, les chiffres de l'heure clignotent (12 par défaut).

39. Appuyez sur **REVERSE** ou **FORWARD** pour modifier l'heure et appuyez sur **MENU** pour confirmer.

40. Lorsque l'année aura été saisie, les chiffres de l'heure clignotent (12 par défaut).

41. Appuyez sur **REVERSE** ou **FORWARD** pour modifier l'heure et appuyez sur **MENU** pour confirmer.

42. Lorsque l'année aura été saisie, les chiffres de l'heure clignotent (12 par défaut).

43. Appuyez sur **REVERSE** ou **FORWARD** pour modifier l'heure et appuyez sur **MENU** pour confirmer.

44. Lorsque l'année aura été saisie, les chiffres de l'heure clignotent (12 par défaut).

45. Appuyez sur **REVERSE** ou **FORWARD** pour modifier l'heure et appuyez sur **MENU** pour confirmer.

- 4